


Calibers L890.1 / L890.2 / L891.1 / L891.2  
L892.1 / L892.2 / L893.1 / L893.2



**LONGINES**

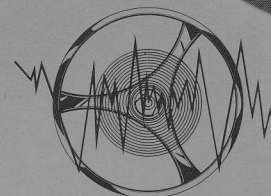

### 3.7 Concordance table of components

No.	L 890.1	L 890.2	L 891.1	L 891.2	L 892.1	L 892.2	L 893.1	L 893.2	Designation
100	X		X		X		X		Main plate
100		X		X		X		X	Main plate
118	X		X		X		X		Combined bridge
118		X		X		X		X	Combined bridge
121/6	X	X	X	X	X	X	X	X	Balance bridge, mounted
125	X	X	X	X	X	X	X	X	Pallet bridge
145			X	X					Dial support
163/1	X	X	X	X	X	X	X	X	Center tube
166	X	X	X	X	X	X	X	X	Casing clamp
180/1	X	X	X	X	X	X	X	X	Complete upper barrel (small)
180/2	X	X	X	X	X	X	X	X	Complete lower barrel (large)
201/1	X	X	X	X	X	X	X	X	Great wheel
210	X	X	X	X	X	X	X	X	Third wheel
220	X	X	X	X	X	X	X	X	Second wheel, short pivot
242/2	X	X			X	X			Cannon pinion with driving wheel, h=2.39 mm
242/2							X	X	Cannon pinion with driving wheel, h=2.39 mm
242/4			X	X					Cannon pinion with driving wheel, h=2.94 mm
255/2	X	X			X	X	X	X	Hour wheel, h=1.25 mm
255/4			X	X					Hour wheel, h=1.80 mm
260	X	X	X	X	X	X	X	X	Minute wheel
275/2	X	X			X	X			Center-second pinion, h=4.74 mm
275/4			X	X					Center-second pinion, h=5.29 mm
307	X	X	X	X	X	X	X	X	Complete regulator (Spirofin)
370	X	X	X	X	X	X	X	X	Upper "Kif", jeweled
371	X	X	X	X	X	X	X	X	Lower "Kif", jeweled
401	X	X	X	X	X	X	X	X	Winding stem
404	X	X	X	X	X	X	X	X	Stem for water-resistant case (movement part)
407	X	X	X	X	X	X	X	X	Sliding pinion
410	X	X	X	X	X	X	X	X	Winding pinion
420	X	X	X	X	X	X	X	X	Crown wheel
435	X	X	X	X	X	X	X	X	Yoke
440	X	X	X	X	X	X	X	X	Yoke spring
443	X	X	X	X	X	X	X	X	Setting lever
445	X	X	X	X					Setting-lever jumper
445					X	X	X	X	Setting-lever jumper
447	X	X	X	X	X	X	X	X	Stem spring
450	X	X	X	X	X	X	X	X	Setting wheel
452	X	X	X	X	X	X	X	X	Ratchet winding wheel
453	X	X	X	X	X	X	X	X	Intermediate setting wheel
454	X	X	X	X	X	X	X	X	Ratchet winding-wheel swing-lever, complete
462	X	X	X	X	X	X	X	X	Minute-train bridge
491/1	X	X	X	X	X	X	X	X	Stem spring lever (bezel opening 30.00 mm)
491/2	X	X	X	X	X	X	X	X	Stem spring lever (bezel opening 29.00 mm)
491/3	X	X	X	X	X	X	X	X	Stem spring lever (bezel opening 28.00 mm)
491/4	X	X	X	X	X	X	X	X	Stem spring lever (bezel opening 27.00 mm)
510	X	X	X	X	X	X	X	X	Mainspring-releasing pinion
705	X	X	X	X	X	X	X	X	Escape wheel
710	X	X	X	X	X	X	X	X	Pallet fork, mounted
721	X	X	X	X	X	X	X	X	Complete balance
963	X	X	X	X	X	X	X	X	Stem for water-resistant case (crown part)
1142	X								Automatic-device bridge (with ball bearing)
1142		X							Automatic-device bridge (with ball bearing)
1142			X						Automatic-device bridge (with ball bearing)
1142				X					Automatic-device bridge (with ball bearing)
1142					X				Automatic-device bridge (with ball bearing)
1142						X			Automatic-device bridge (with ball bearing)
1142							X		Automatic-device bridge (with ball bearing)
1142								X	Automatic-device bridge (with ball bearing)
1143	X	X	X	X	X	X	X	X	Complete oscillating weight
1482	X	X	X	X	X	X	X	X	Ratchet-wheel driving wheel
1499	X	X	X	X	X	X	X	X	Reverser intermediate wheel
1535/1	X	X	X	X	X	X	X	X	Reversing wheel, mounted
2535	X	X	X	X	X	X	X	X	Date-indicator maintaining plate
2543	X	X	X	X					Intermediate date wheel, mounted

No.	L 890.1	L 890.2	L 891.1	L 891.2	L 892.1	L 892.2	L 893.1	L 893.2	Designation
2556	X	X							Date-indicator driving wheel, mounted
2556			X	X					Date-indicator driving wheel, mounted
2556/8	X	X	X	X					Date-indicator retaining strip
2557/1	X	X							Date-indicator, window at "3 o'clock"
2557/1			X	X					Date-indicator, window at "3 o'clock"
2557/2	X	X							Date-indicator, window at "4.30 o'clock"
2557/3	X	X							Date-indicator, window at "6 o'clock"
2557/3			X	X					Date-indicator, window at "6 o'clock"
2561/1			X	X					Day star with dial disk, window at "3 o'clock"
2561/3			X	X					Day star with dial disk, window at "6 o'clock"
2566	X	X	X	X	X	X	X	X	Date-corrector
2567			X	X					Day-corrector
2572	X	X	X	X	X	X	X	X	Date-corrector spring
2573			X	X					Day-jumper spring
2575	X	X	X	X					Date-jumper spring
2576	X	X	X	X					Date jumper
2577			X	X					Day jumper
9471	X	X	X	X	X	X			Blocking spring
5101	X	X	X	X	X	X	X	X	Case screw (1080.69)
5118	X	X	X	X	X	X	X	X	Screw for combined bridge (1071.13)
5121/6	X	X	X	X	X	X	X	X	Screw for mounted balance bridge (1071.13)
5125	X	X	X	X	X	X	X	X	Pallet-bridge screw (1071.12)
5166	X	X	X	X	X	X	X	X	Casing-camp screw (1080.88)
5443	X	X	X	X	X	X	X	X	Setting-lever screw (1071.13)
5462	X	X	X	X	X	X	X	X	Screw for minute-train bridge (1071.12)
5510	X	X	X	X	X	X	X	X	Screw for mainspring-releasing pinion (1071.12)
5738	X	X	X	X	X	X	X	X	Stud screw (1040.34)
5750	X	X	X	X	X	X	X	X	Dial screw (1071.14)
51142	X	X	X	X	X	X	X	X	Screw for automatic-device bridge (1071.13)
51143	X	X	X	X	X	X	X	X	Oscillating-weight screw (1090.45)
52535	X	X	X	X	X	X	X	X	Screw for date-indicator maintaining plate (1071.13)
52556/8	X	X	X	X					Screw for data-indicator retaining strip (1071.13)
52572	X	X	X	X	X	X	X	X	Screw for date-corrector spring (1071.25)
52573			X	X					Screw for day-jumper spring (1071.11)
52577			X	X					Day-jumper screw (1071.11)



